




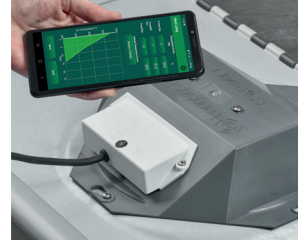


INSTRUCTIONS

Veng Infra/Green

Initial setup

-  Install VengSystem-VE221 app from the Google Play store and launch the app
-  Verify that your phones NFC is turned on
-  Make sure the lamp is powered on. Hold your phone close to the NFC symbol
-  Wait for an audible confirmation and adjust settings as needed
-  Hold phone close to NFC symbol once more and await audible save confirmation



Change operating mode








-  Use magnet to change mode (on/automatic/off)











Start new batch

-  Hold magnet at heater until control lamp changes to white

Control lamp

-  Solid green light: Heater is on constantly (full power)
-  Green flashing: Heater is controlled automatically
-  Green/blue flashing: Heat is limited from age of piglets
-  Solid blue light: Heater is off
-  Blue flashing: Heat is manually set between 1-99 %
-  Solid red light: Heater error
-  Solid white light: Day number has recently been reset. Heater is controlled automatically

Hints, tips and troubleshooting steps

-  Unplug heat lamp when cleaning infrared sensor
-  Infrared sensor cannot read through glass
-  Do not cover infrared sensor
-  Use smart phone to view detailed alarms
-  Use smart phone to view historical data
-  Place wire mesh so infrared sensor has free view
-  Place wire mesh close to the lamp
-  Find out more at www.vengsystem.com